

IMPORTANT

Always be sure the DVR is in the 'OFF' position when attaching it to the USB port on your computer. After a few seconds with the DVR still attached to the computer switch the DVR on. After approximately 20 to 30 seconds it will then show up as a removable drive in your computer and you can then copy or delete your recordings as necessary.

**** If there is a problem with the DVR not showing up as a removable drive then the following instructions may help.**

If you are not comfortable with this procedure do not attempt it, but instead call Versatile Information Products for assistance @ 1-800-794-4044

Step 1

Turn off the DVR and attach it to the USB port on your computer. While it is attached turn the DVR on.

Step 2

Click the Windows 'Start' button



Step 3

Click 'Control Panel'

 


Step 4

Click on 'Administrative Tools'

Step 5

Click on 'Computer Management'

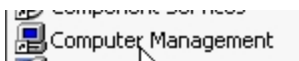

Step 6

Click on 'Device Manager'



Step 7

Look for 'Other devices', 'USB camera' with a yellow **?** and/or **!**. If you already have a USB camera attached to your computer be sure you choose the correct one. If you are not sure what to do at this point simply close all the windows and call for assistance.

Step 8

Right click on the 'USB camera' and choose 'Uninstall'



Step 9

Click the 'OK' box



Step 10

Unplug the DVR from the computer. Make sure it is turned 'OFF' then re-attach it to the computer. Wait 10 seconds and with the DVR still attached to the USB port on the computer slide the power switch to the 'ON' position. After 20 to 30 seconds the DVR should be detected as a removable drive on the computer and you can copy or delete the recordings off the DVR as needed.